


FAQ - LK Mobile pumping unit

The pump has hung up

If the circulation pump is stuck / has hung up, this can be fixed as follows.

In some cases it is enough to knock gently on the pump housing using a rubber hammer while starting / stopping the pump repeatedly using the unit's power switch. If this does not help follow below instructions.

1. Remove the pump housing by loosening the three bolts. Use the ring / fork 10 mm. It is easier if Mobile pumping unit is placed on the back.

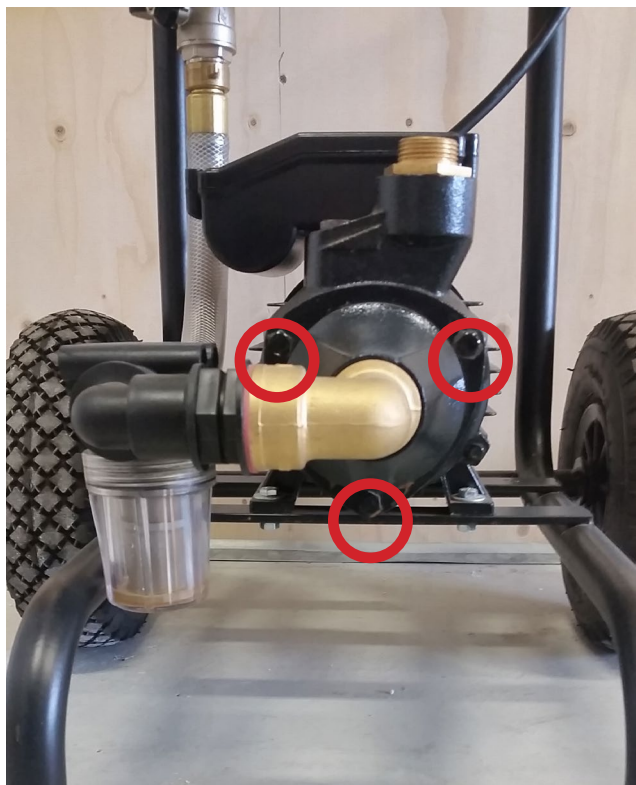

2. When the pump housing is removed, turn the the pump wheel back and forth until it is loose. Clean / blow off any. contaminants from the pump wheel and the pump housing before pump housing is reassembled. Ensure that the O-ring is undamaged.